

Color CCD Camera

WAT-250D

Operation Manual

This Operation Manual covers safety, camera functions, installation and the correct operating procedure for the WAT-250D. First, we ask you to read this Operation Manual thoroughly, then install and operate the WAT-250D as advised. In addition, for future reference, we also advise safekeeping of this manual

Please contact the distributor or dealer from which the WAT-250D was purchased, if you do not understand the installation, operation or safety instructions laid out in this manual. Not understanding the contents of the Operation Manual sufficiently may cause damage to the camera.

Guide to the Safety Symbols

The definitions of the symbols used in this operation manual are:



When you do not adhere to or take notice of the "Danger" sign, it may lead to a serious accident such as death or injury caused by fire or electric shock.



When you do not adhere to or take notice of the "Warning" sign, it may cause severe damage such as a physical injury.



When you do not adhere to or take notice of the "Caution" sign, Caution it may incur injury and cause damage to peripheral objects in the immediate surroundings.

Cautions for Safety

The WAT-250D is designed to be used safely; however, it may lead to a physical accident caused by fire and electric shock if not used correctly. Therefore, please keep and read the "Cautions for safety" below for protection against accidents.



- Do not disassemble and/or modify the WAT-250D.
- Do not operate the WAT-250D with wet hands.



• Use only the AD901-120/230 or equivalent power adaptor for the WAT-250D

The recommended voltage is DC+12V \pm 10%.

• Do not expose the WAT-250D to wetness or high moisture conditions

The WAT-250D is designed and approved for indoor use only. The WAT-250D is not water-resistant or waterproof. If the location of the camera is outdoors or in an outdoor like environment, we recommend that you use an outdoor camera

- Protect the WAT-250D from condensation. Keep the WAT-250D dry at all times during storage and operation
- · Should the camera not work properly, switch off the power immediately. Then check the camera according to the "Problems and Trouble shooting" section.



Avoid the striking of hard objects or dropping the WAT-

The WAT-250D uses high quality electrical parts and precision components

 Do not connect any power supply directly to the video out terminal of the unit.

Do not connect the WAT-250D with any monitor using a video/power single transmission terminal. The WAT-250D is not designed for use with this type of equipment. We also advise you to read the operation manual of the monitor you plan to use before any connections are made.

• Do not install the WAT-250D in a position subject to direct

Sunlight shinning directly onto the WAT-250D lens can cause damage to the CCD.

 Select a stable place for installation of the WAT-250D. Use a support of durable strength around an installation position on a ceiling or wall when a camera stand or tripod is used.

• Do not move the WAT-250D with the cables connected. Before moving the WAT-250D, always remove the video cable and power cable from the rear of the camera first.

 Avoid using the WAT-250D near any strong electromagnetic field.

After installing into main equipment, if the WAT-250D is exposed to electromagnetic waves causing the monitored image to become distorted, we recommend the camera be shielded by appropriate protective casing

Problems and Trouble Shooting

If any of the following problems occur when using the WAT-250D,

- An optimal picture cannot be obtained, after checking that all the cables and connections are correctly in place
- Smoke or any unusual odor emerges from the WAT-250D
- An object becomes embedded or a quantity of liquid seeps into the
- More than the recommended voltage or/and amperage has been applied to the WAT-250D by mistake
- Anything unusual occurring to any equipment connected to the WAT-250D

Disconnect the camera immediately according to the following procedures:

1) Switch off the main power supply to the camera.

NTSC FCC Part15 class B

②Remove the power and video cables connected to the WAT-250D.

3 Contact the distributor or dealer from which the WAT-250D was purchased

About EMC

The WAT-250D is in conformity with EMC test standards carried out by authorized organizations in Japan.

 
PAL EN61000-6-3/EN50130-4




Do not modify the WAT-250D. A modified camera may not conform to FMC test standards

Contents

Using the contents figures below, check to make sure all parts are present before use



Description of Parts

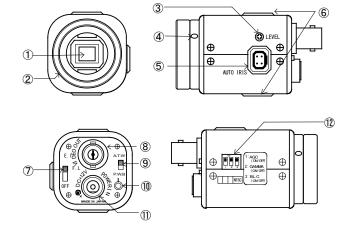

(1)CCD FRONT FACE

• The light receiving face of the CCD camera (Dirt, water or oil deposits on the CCD will cause an unclear picture on the monitor. Attach the lens cap to protect the lens and the CCD from contamination and damage.)

2LENS MOUNT

· Mount for the lens (CS-mount)

③IRIS LEVEL VOLUME

• By controlling the volume, the iris level of the DC iris lens can be adjusted.

4 FOCUSING ADJUSTMENT SCREWS

• There are 3 hex. adjustment screws each placed at intervals of 120° for fine focusing of the lens.

⑤AUTO-IRIS SOCKET

• This socket is for the video/DC auto-iris lens cable connector. (Video/DC: Auto selected by the camera)

©TRIPOD MOUNTING SCREW HOLES

• Mounting holes for stands. The size of these threads are 1/4", 20 threads, 4.5 ± 0.2 mm, which is the same as any standard camera tripod (U1/4").

⑦AE MODE CONTROL

• The switch for the shutter speed mode control according to the object being monitored.

(8) VIDEO OUT (BNC)

• The terminal for composite video signal output

9WHITE BALANCE

· The switch for selecting white balance mode.

10PUSH-LOCK WHITE BALANCE

• The button for manual setting of the white balance if the white balance mode is set to P.W.B.

①POWER IN

• The terminal designed for connection with the DC-plug of the power adaptor.

12 FUNCTION SWITCHES

· Functional switches for setting AGC, gamma control and B.L.C (Back

Power Supply

If any other power adaptor besides the AD901-120/230 is used, please use a stabilized power adaptor designed for DC+12V±10%, with a current capacity of more than 250mA.

Use the optional DC plug if the shape or polarity of the DC plug of the power adaptor to be used is not compatible with the camera (See the drawing on the right).





The wiring on the connector must be exact. Be careful no to touch the other terminal while wiring. Protect the wiring portion by using insulation tape after wiring. If the above care and attention is not adhered to. damage to the WAT-250D and power adaptor may occur and may also cause fire.



Auto-iris Lens

Before connecting the auto-iris lens, please make sure that the pin configuration is correct by confirming with the following table. If the configuration of your iris connector is different from the following, the plug and pins will need to be rewired.



Pin No.	EIAJ Video Auto-iris Lens Arrangement	EIAJ DC Auto-iris Lens Arrangement
1	Power	Control -
2	Not used	Control +
3	Iris signals	Drive +
4	Common (GND)	Drive —

Set-up and Operation

- 1) Ensure that the power to the WAT-250D and the peripheral equipment is turned off before making any connections
- 2) Remove the lens mount cap from the WAT-250D and attach the CS-mount lens. Use the optional C-mount adaptor(30CMA-R) when a C-mount lens is used
- 3) Connect the iris control cable to ⑤AUTO-IRIS SOCKET on the WAT-250D when an auto-iris lens is being used.
- 4) Connect ®VIDEO OUT on the WAT-250D with the monitor, using a coaxial cable with 75 Ω impedance, such as an RG-58/U or an RG-6/U. Select a monitor with the same television system as the WAT-250D: NTSC or PAL. A monitor with more than 500TV lines is recommended.
- 5) Insert the power plug of the power adaptor to ①POWER IN on the back panel of the WAT-250D. Confirm that the power adaptor is not connected to the power supply before insertion of the power plug into **1)POWER**
- 6) Turn on the power to the WAT-250D, monitor and all other allied equipment. When a picture cannot be obtained on the monitor, check and follow the procedure mentioned in the [Problems and Trouble Shooting section.
- 7) After following the procedure below and the picture is still out of focus, open the iris fully and loosen 4FOCUSING ADJUSTMENT SCREWS with the hex. wrench and move the lens forwards until a clear picture is obtained.

Manual Lens	Adjust the focus and iris to the best position on the lens.	
Video Auto-iris Lens	Adjust the focus on the lens.	
DC Auto-iris Lens	Adjust the iris level on the camera, then adjust the focus on the lens. See below.	

Iris Level Adjustment (for DC auto-iris lenses only)

Adjust ③IRIS LEVEL VOLUME placed on the side of the unit until an acceptable light level is attained. No change will occur if a video iris lens or manual iris lens is fitted.



8) Select any required shutter speed mode by the ⑦AE MODE CONTROL

AE Mode	Effect
EI	Automatically selects the shutter speed in the range between NTSC1/60-1/100000, PAL1/50-1/100000 according to the lighting condition.
FL	Reduces the flickering phenomena occurring on the monitor screen caused by fluorescent or mercury lamps.
OFF	Fixes the shutter speed to NTSC1/60, PAL1/50.

XIn El mode, intense light may leave a trail on the screen longitude. This smearing is a natural phenomenon and is not due to equipment failure or fault

9) Adjust the required white balance settings by the @WHITE BALANCE or **10**PUSH-LOCK WHITE BALANCE.

Mode	Effect	
A.T.W	Automatically adjusts to the changing color temperature of the illumination.	
P.W.B	Manually adjusted according to your requirement	

10) Set the ①FUNCTION SWITCHES according to your requirements.



Switch	Setting	Effective Condition	Factory Settings
1.	ON · When sensitivity is more important than the SN ratio		\
AGC	OFF	 When SN ratio is more important than sensitivity, or when a stable lighting condition is present. 	
2 . Gamma	ON	Applicable to a general surveillance monitoring system	V
Correction	OFF	 When gamma correction is not required for image processing 	
3. B.L.C	ON	When the picture of the monitored object is silhouetted due to strong lighting from above or behind	>
B.L.C	OFF	When the illumination differences between a monitored object is narrow.	

※Back light compensation is available when EI of ⑦AE MODE CONTROL or AGC of 12 FUNCTION SWITCHES is set to ON. Use an auto-iris lens if the above setting cannot be obtained

Options

To purchase these options, please contact the distributor or dealer from which you purchased the WAT-250D $\,$



AC Adaptor (AD901-120/230)

The recommended AC adaptor for the WAT-250D for a constant and stable power supply.



C-mount Adaptor (30CMA-R)

This lens mount adaptor is used to convert a CS-mount to a C-mount.



Mini Stand (MS50)

A convenient stand for the WAT-250D. With this stand, the camera can be adjusted to any desired angle.

Specifications

Model		WAT-250D (NTSC)	WAT-250D (PAL)
Pick-up Element		1/3 inch interline transfer CCD image sensor	
Number of To	tal Pixels	811(H) × 508(V)	795(H) × 596(V)
Number of Effective Pixels		768(H)×494(V)	752(H) × 582(V)
Unit Cell	Size	$6.35 \mu\text{m(H)} \times 7.4 \mu\text{m(V)}$	$6.5 \mu \text{ m(H)} \times 6.25 \mu \text{ m(V)}$
Imaging S	ystem	Ye, Cy, Mg, and G complementary color mosaic filters on chip	
Sync. Sy	stem	Internal	
Scanning S	System	2:1 interlace	
Video Ou	ıtput	Composite video, 1.0 V(p-p) 75 Ω (Unbalanced)	
Resolutio	n (H)	More than 45	0TVL (Center)
Minimum Illu	mination	0.1 lx.	F1.2
S/N		More than 50dB (AGC=8dB, γ = 1.0)	
	OFF	1/60 sec.	1/50 sec.
AE Mode	FL	1/100 sec.	1/120 sec.
	El	1/60-1/100000 sec.	1/50-1/100000 sec.
White Ba		ATW, PWB	
AGC	ON	8-36dB	
AGG	OFF	8dB	
Gamma Chara	acteristics	$\gamma = 0.45(ON) / \gamma = 1.0(OFF)$	
Lens in	ris	Video / DC (EIAJ arrangement, Auto-select)	
Back Light Compensation		ON / OFF	
Power St	ıpply	DC+12V±10%	
Power Cons	umption	1.74W (145mA)	
Operating Ten	nperature	-10 - +40°C (Without condensation)	
Operating Humidity		Less than 95% RH	
Storage Temperature		-30 - +70°C (Without condensation)	
Storage Humidity		Less than 95% RH	
Lens Mount		CS-mount	
Size		36(W) × 36(H) × 64(D) mm	
Weight		Approx. 90g	

- Design and specifications are subject to change without notice.
- Watec is not responsible for any inconvenience or the attendant damages to the video and monitoring recording equipment caused by misuse, misoperation or improper wiring of our equipment.

 • If for any reason the WAT-250D does not work properly, or if you have
- any questions regarding installation or operation, please contact the distributor or dealer from which it was purchased.

Contact information



Watec Co., Ltd.

Add.: 254-2 Nihonkoku, Daihoji, Tsuruoka- Shi, Yamagata-Ken, 997-0017 Japan TEL: +81-235-23-4400 FAX: +81-235-23-4409

Email: info-o@watec.co.jp URL: http://www.watec.net

0963Z00-Y2000006