

Monochrome CCD Camera

WAT-704R

Operation Manual

This Operation Manual covers safety, camera functions, installation and the correct operating procedure for the WAT-704R. First, we ask you to read this Operation Manual thoroughly, then install and operate the WAT-704R as advised. In addition, for future reference, we also advise safe keeping of this manual.

Please contact the distributor or dealer from which the WAT-704R was purchased, if you do not understand the installation, operation or safety instructions laid out in this manual. Not understanding the contents of the Operation Manual sufficiently may cause damage to the camera.

Guide to the Safety Symbols

The definitions of the symbols used in this operation manual are:

Danger

When you do not adhere to or take notice of the "Danger" sign, it may lead to serious accident such as death or injury caused by fire or electric shock.

Marning

Caution

When you do not adhere to or take notice of the "Warning" sign, it may cause severe damage such as a physical injury.

When you do not adhere to or take notice of the "Caution" sign, it may incur injury and cause damage to peripheral objects in the immediate surroundings.

Cautions for Safety

WAT-704R is designed to be used safely, however it may lead to physical accident caused by fire and electric shock if not used correctly. Therefore, please keep and read the "Cautions for Safety" for protection against accidents.

Danger

Do not disassemble and/or modify the WAT-704R.
Do not operate the WAT-704R with wet hands.



Use only the AD502-120/230 or equivalent power adaptor

for the WAT-704R. The recommended voltage is $DC+9V\pm 10\%$.

• Do not expose the WAT-704R to wetness or high moisture conditions.

The WAT-704R is designed and approved for indoor use only. The WAT-704R is not water-resistant or waterproof. If the location of the camera is outdoors or in an outdoor like environment, we recommend that you use an outdoor camera housing.

- Protect the WAT-704R from condensation. Keep the WAT-704R dry at all times during storage and operation.
- Should the camera not work properly, switch off the power immediately. Then check the camera according to the "Problems and Trouble Shooting" section.



• Avoid the striking of hard objects or dropping the WAT-704R.

The WAT-704R uses high quality electrical parts and precision components.

- Do not wire the WAT-704R with any monitor using a video/ power single transmission terminal. The WAT-704R is not designed for use with this type of equipment. We also advise you to read the operation manual of the monitor you plan to use before any connections are made.
- Do not install the WAT-704R in a position subject to direct sunlight.

Sunlight shinning directly onto the WAT-704R lens can cause damage to the CCD.

- Select a stable place for installation of the WAT-704R. Use a support of durable strength around an installation position on a ceiling or wall when a camera stand or tripod is used.
- Do not move the WAT-704R with the cables connected. Before moving the WAT-704R, always remove the video cable and power cable from the rear of the camera first.
- Avoid using the WAT-704R near any strong electromagnetic field.
- After installing into main equipment, if the WAT-704R is exposed to electromagnetic waves causing the monitored image to become distorted, we recommend the camera be shielded by appropriate protective casing.

Problems and Trouble Shooting

If any of the following problems occur when using the WAT-704R,

- An optimal picture cannot be obtained, after checking that all the cables and connections are correctly in place.
- Smoke or any unusual odor emerges from the WAT-704R.
- An object becomes embedded or a quantity of liquid seeps into the camera housing.
- More than the recommended voltage or/and amperage has been applied to the WAT-704R by mistake.
- Anything unusual occurring to any equipment connected to the WAT-704R.

Disconnect the camera immediately according to the following procedures:

①Switch off the main power supply to the camera.

②Remove the power and video cables connected to the WAT-704R.

③Contact the distributor or dealer from which the WAT-704R was purchased.

About EMC

 
The WAT-704R is in conformity with EMC test standards carried out by authorized organizations in Japan.

- E I A FCC Part15 class B
- CCIR EN61000-6-3/EN50130-4

Do not modify the WAT-704R. A modified camera may not conform to EMC test standards.

Contents

Using the contents figures below, check to make sure all parts are present before use.



- ① Lens (Upper: Type G3.8, Lower: Type P3.7)
- ② WAT-704R
- ③ Installation ring mount
- ④ Screw for ring mount (M2.6 x 8mm)
- ⑤ Nut for ring mount (M2.6)


Power Supply

If any other power adaptor besides the AD502-120/230 is used, please use a stabilized power adaptor designed for DC+9V \pm 10%, with a current capacity of more than 150mA. Use the optional DC plug if the shape or polarity of the DC plug of the power adaptor to be used is not compatible with the camera.


The wiring on the connector must be exact.

Be careful not to touch the other terminals while wiring. Protect the wired portion by using insulation tape after wiring. If the above care and attention is not adhered to, damage to the WAT-704R and power adaptor may occur and may also cause fire.

[Diagram of output cable]

 


[Connection of output cables]

 

Assembly and setting up

When using the ring mount

[Setting of the ring mount]

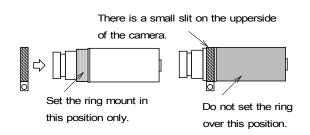

Fix the mount by passing the ring over the lens of the camera, and then attach the thread and nut.

%Fix the ring on the housing with appropriate force and then check to make sure the camera is fixed firmly and squarely. Improper setting might cause damage to the camera cover.

Set-up and Operation

①Refer to the[Connection of output cables] and the wiring must be exact.

- ②Join the video out cable with the video in cable of the monitor or peripheral equipment.
- ③Join the power supply using the correct procedure.
- ④Make sure that a picture can be seen on the monitor
- ⑤To focus, turn the lens clockwise or counterclockwise while observing the picture on the monitor. (Take care when focusing not to scratch or damage the lens.

Pinhole lenses

Focusing of the pinhole lens (type P3.7) can be done by turning the lens clockwise or counterclockwise while placing a pair of tweezers in the focusing adjustment dents as shown in the figure on the right.



Options

To purchase these options, please contact the distributor or dealer from which you purchased the WAT-704R.



AC Adaptor (AD502-120/230)

The recommended AC adaptor, for the WAT-704R for a constant and stable power supply.

Holder (H002)

H002 is used for mounting the WAT-704R with ring mount. This holder has a U1/4"thread in the center and a M2 thread in the four corners for mounting on stands.

Specifications

Model	WAT-704R (EIA)	WAT-704R (CCIR)
Pick-up Element	1/4 inch interline transfer CCD image sensor	
Number of Total Pixels	537(H) × 505(V)	537(H) × 597(V)
Number of Effective Pixels	510(H)×492(V)	500(H)×582(V)
Unit Cell Size	7.15 μ m(H) × 5.55 μ m(V)	7.3 μ m(H) × 4.7 μ m(V)
Sync. System	Internal	
Scanning System	2:1 interlace	
Video Output	Composite video, 1.0 V(p-p) 75Ω (Unbalanced)	
Resolution (H)	More than 380TVL (Center)	
Minimum illumination	0.08 lx. F2.0	
S/N	More than 46dB (AGC=5dB, γ =1.0)	
AE (Auto-exposure)	1/60-1/100000 sec.	1/50-1/100000 sec.
AGC	5-32dB	
Gamma Characteristics	$\gamma \doteq 0.45$	
Back Light Compensation	ON	
Power Supply	DC+9V±10%	
Power Consumption	0.95W (105mA)	
Operating Temperature	-10 - +40°C (Without condensation)	
Operating Humidity	Less than 95% RH	
Storage Temperature	-30 – +70°C (Without condensation)	
Storage Humidity	Less than 95% RH	
Lens mount	M13 P=1.0	
Standard Lenses	G3.8 (Glass f3.8 F2.0) / P3.7(Pinhole f3.7 F4.5)	
Size	ϕ 18 × 37 + Lens (mm)	
Weight	Approx. 25g	

• Design and specifications are subject to change without notice.

 Watec is not responsible for any inconvenience or the attendant damages to the video and monitoring recording equipment caused by misuse, misoperation or improper wiring of our equipment.

 If for any reason the WAT-704R does not work properly, or if you have any questions regarding installation or operation, please contact the distributor or dealer from which it was purchased.

